

# LOMAC<sup>®</sup>

## BRUSH WEAR INDICATOR

1. REMOVE BRUSHES FROM MACHINE
2. INSERT CARD INTO BRISTLES TO THE CORE
3. CHECK BRISTLE LENGTH

**BRUSH OPERABLE**

**REPLACE BRUSH**

